 





KEY FOB PTT

User Guide - Pairing

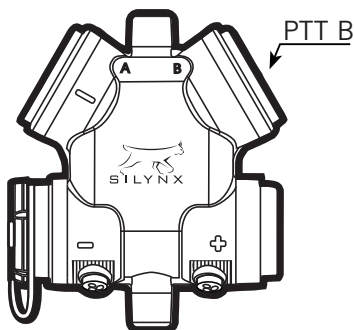

 CLARUS

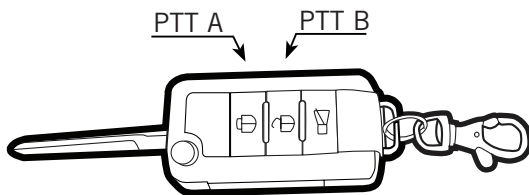

Key FOB PTT

INSTRUCTIONS


1. Power on CLARUS (Press and hold (+) for 5 sec).
2. Press PTT B quickly 5 times.
3. A slow beeping tone heard in the headset indicates the CLARUS is in pairing mode. (As the pairing time runs out the beeping will speed up)
4. Position the Key Fob PTT close to the CLARUS.
5. Press all three buttons on the Key Fob PTT (“lock”, “unlock”, and “panic”) at the same time.
6. A short rapid beeping confirmation tone will indicate a

Note: Pairing must occur within 60 sec after powering on the CLARUS

*Information subject to change without notice


SMART PHONE CABLE

User Guide

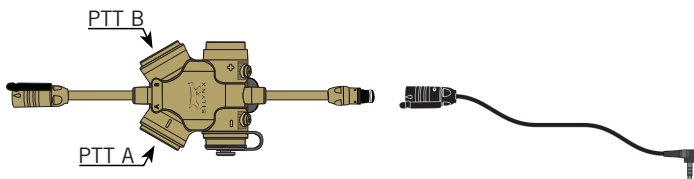


Connected Directly to the CLARUS

 1. Hold PTT A to transmit
2. Press PTT B to Answer / End calls

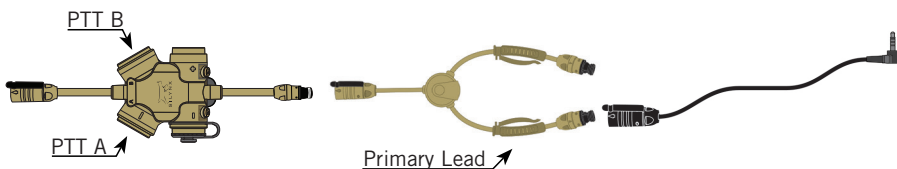

Connected to Dual Comms Splitter (Primary Lead)

 1. Hold PTT A to transmit
2. Tap PTT A to Answer / End calls

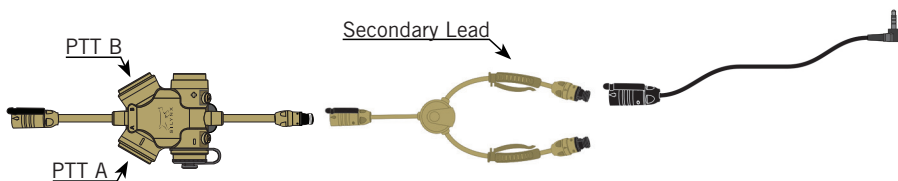

Connected to Dual Comms Splitter (Secondary Lead)

1. Hold PTT B to transmit
2. Tap PTT B to Answer / End calls